



YAMAHA

2008

SERVICE MANUAL

**XV19SX(C)
XV19MX(C)
XV19CTSX(C)
XV19CTMX(C)
XV19CSX(C)
XV19CX(C)**




EAS27090

IGNITION SYSTEM

EAS27110

CIRCUIT DIAGRAM

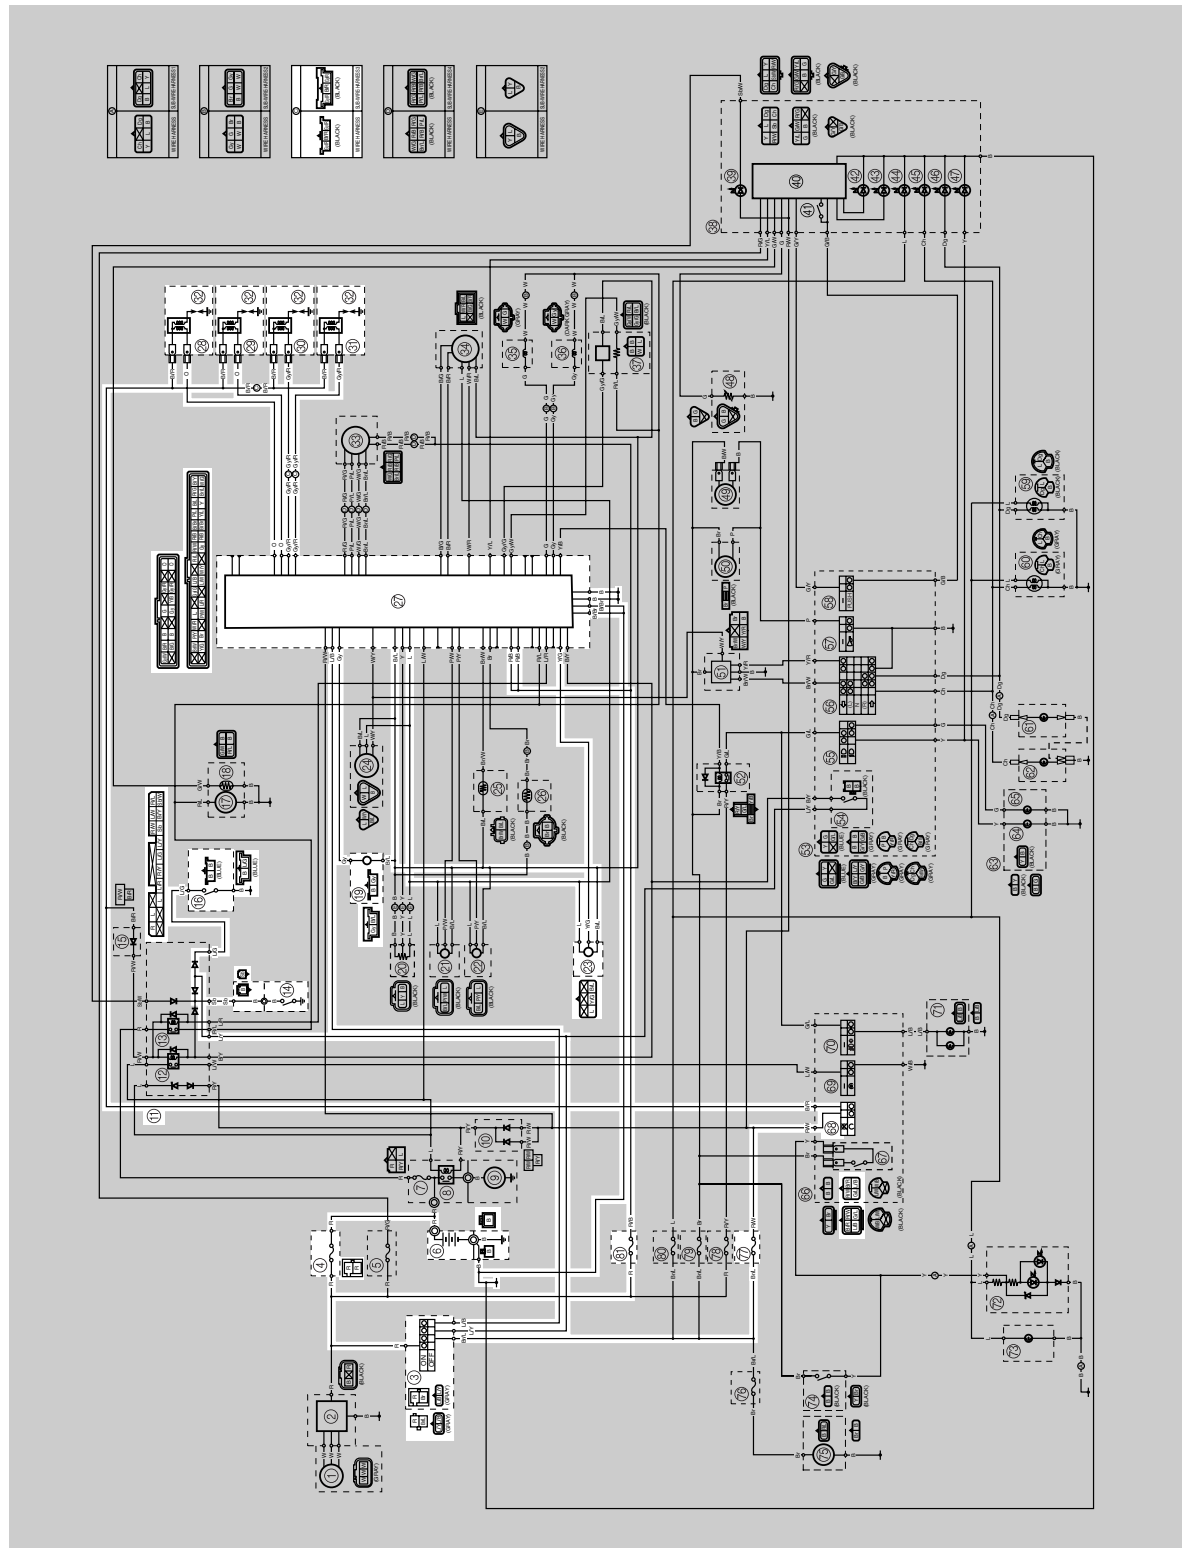

IGNITION SYSTEM

- 3. Main switch
- 4. Main fuse
- 6. Battery
- 11. Relay unit
- 14. Neutral switch
- 16. Sidestand switch
- 19. Crankshaft position sensor
- 23. Lean angle sensor
- 27. ECU (electronic control unit)
- 28. Cylinder-#1 left ignition coil
- 29. Cylinder-#1 right ignition coil
- 30. Cylinder-#2 left ignition coil
- 31. Cylinder-#2 right ignition coil
- 32. Spark plug
- 68. Engine stop switch
- 77. Ignition fuse
- 81. ECU fuse (for XV19S(C)/ XV19M(C)/
XV19CTS(C)/ XV19CTM(C))